

**INSTRUCTIONS FOR REGULATING INDEPENDENT TEMPERATURE CONTROL FOR LIRA MODEL .**



**Intertek**



**Intertek**

**ITC + ES**  
**INDIPENDENT TEMPERATURE CONTROL**  
**+ ENERGY SAVING**



**USER**

# MAIN SWITCH OPERATION POSITION




**0**

**SWITCH OFF MACHINE**



**1**


**WATER FILL AND  
CURRENT WITHOUT  
BOILER HEATING**

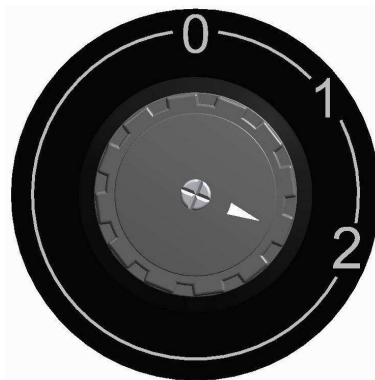


**2**

**POWER AND HEATING  
BOILER**

# SWITCH HEATING SERVICES BOILER

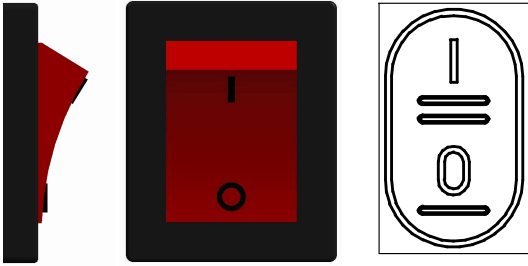

**HALF POWER HEATING  
SERVICES BOILER**

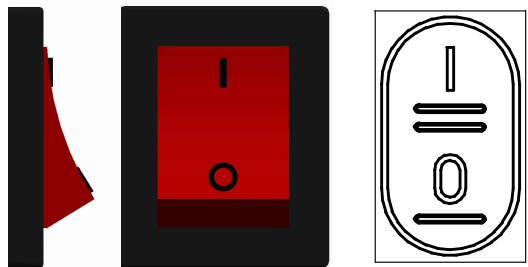

**FULL POWER SERVICES  
BOILER HEATING**

# SWITCH HEATING BOILER GROUP



**HALF POWER HEATING  
GROUP BOILER**



**FULL POWER BOILER  
GROUP HEATING**



# INITIALIZING

- AFTER YOU TURN THE MACHINE ON, THE **oFF** SIGN WILL APPEAR ON THE DISPLAY.



- TO TURN ON THE TEMPERATURE CONTROL, PRESS THE BUTTON INDICATED AND A VALUE WILL APPEAR ON THE DISPLAY **XXX**




# PROGRAMMING THE DESIRED TEMPERATURE

- PRESS THE INDICATED BUTTON ON THE TOUCHPAD AND THE LETTERS **PrG** WILL APPEAR ON THE DISPLAY.



- IMMEDIATELY PRESS THE BUTTON “DX” UNTIL THE DISPLAY SHOWS A VALUE, CONTINUE PRESSING THE “DX” BUTTON TO INCREASE THE TEMPERATURE OR PRESS THE BUTTON “SX” TO LOWER THE TEMPERATURE.

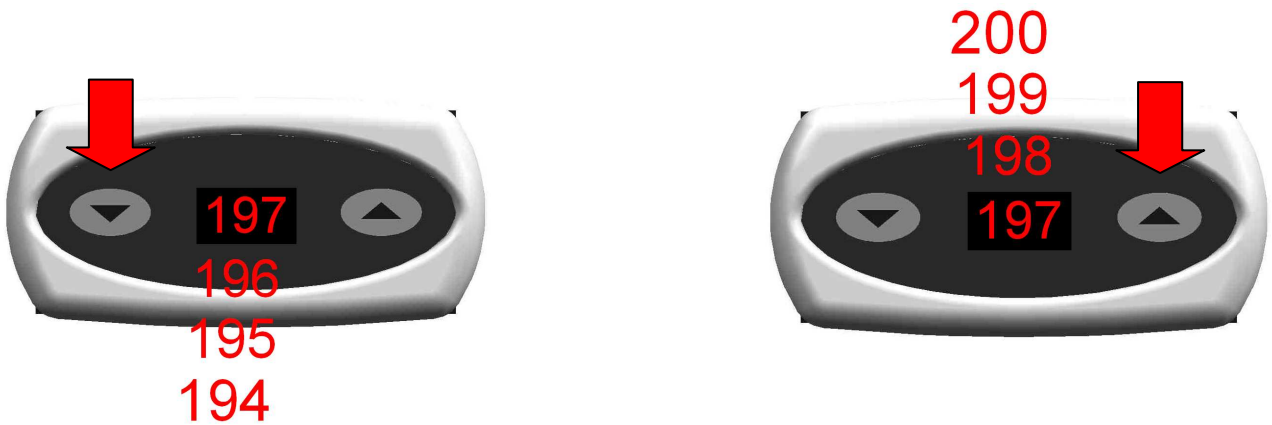

THE TEMPERATURE THAT YOU WISH TO PROGRAM CANNOT BE LESS THAN 176°F OR MORE THAN 266°F.

AFTER 3 SECONDS, FROM YOUR FINAL INPUT, THE PROGRAM IS IN MEMORY AND THE ACTUAL TEMPERATURE WILL APPEAR ON THE DISPLAY.

## TURNING OFF

- TO TURN OFF THE TEMPERATURE CONTROL, PRESS FOR 2 SECONDS THE BUTTON INDICATED UNTIL THE **oFF** SIGN APPEARS.

